USE AND MAINTENANCE MANUAL

Translation of the original instructions

ELECTRIC GRIDDLE PLATE EASY 700







Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014



Dear Customer.

thank you for choosing us. We are certain that this appliance will satisfy your needs and live up to your expectations.

We kindly ask you to read this Use and Maintenance Manual carefully in order to be able to use the appliance to its full potential. For any further information regarding use and maintenance, please do not hesitate to contact us. We will be delighted to answer any questions you may have.

Introduction

Warning on the ownership of information

- In order to foster its policy of continual development and updating of the product, the Manufacturer reserves the right to make any modifications necessary to improve its basic features without having to give notice and without being under any obligation to do so. If the modifications do not change any safety aspects, the Manufacturer is not obliged to give notice of them in this document attached to the appliance.
- The Manufacturer also reserves ownership of this document and strictly forbids its reproduction or disclosure to third parties without prior authorization.
- Any illustrations or drawings in this document are merely simplified representations of the appliance; on the basis of any improvements and modifications made, they may not correspond to the actual appliance.

Updating procedure

- Updating and/or drafting of a new version of the above-mentioned document will only be carried out if the functional or safety aspects of the appliance are modified.

Original version

- This document was originally issued in Italian. In the event of any controversy arising due to the translation of the same, even if carried out by the Manufacturer, the reference text will be the Italian version alone.

- Drafted by: VEGA srl

Reproduction of this document, either in total or in part, is forbidden without prior written consent by the Manufacturer, who reserves the right to modify it without any obligation
to give notice, unless this represents a safety risk.



1	General information	5
1.1	Purpose and description of the manual	6
1.2	Correct manual storage	7
1.3	Identification data	8 8
1.4	Requests for assistance	
2	Technical information	
2.1	General description of the appliance	
3	Safety information	15
3.1	Safety	
4	Information for correct use	19
4.1	First use	
4.2	Complete map of the controls	
4.3	Appliance start and turning off	
4.4	Safety thermostat	
4.5	Recommendations for use	
4.6	What to do in the event of long periods of inactivity	
5	Maintenance information	23
5.1	Maintenance recommendations	
5.2	Ordinary cleaning	
5.3	Useful tips for stainless steel care	
5.4	Troubleshooting	
6	Instructions for qualified fitters	29
6.1	General information	
6.2	Storage	
6.3	Packaging	
6.4		
6.5	Positioning and installation	
6.6	Mains Electricity Connection	
6.7	Inspection and start-up	
6.8	Maintenance to be carried out by a fitter or qualified technician	
7	Tables and annexes	43
7 1	Wiring diagram	44



This page intentionally left blank



Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014

1 GENERAL INFORMATION



1-1 Purpose and description of the manual

This manual is an integral part of the appliance and aims to provide all the information necessary to:

- make operators fully aware of any safety issues;
- guarantee correct installation;
- ensure full understanding of its operating principles and correct, safe use;
- carry out any maintenance correctly and safely;
- dispose of the appliance safely and in compliance with applicable legislation concerning health and safety and environmental protection.

Correct operation of the appliance is guaranteed only if these regulations are complied with.

The Manufacturer declines any responsibility for: damage resulting from poor maintenance, incorrect use, tampering with or any use which does not comply with the terms and conditions indicated in this manual.

The Manufacturer reserves the right to modify any drawings, texts and technical specifications without prior notice or responsibility and without any obligation to update this manual each time.

In the event of problems in understanding this manual, please contact the Manufacturer.

This manual is divided into the following sections:

- Section **1** contains information regarding consultation of this manual and the data necessary to correctly identify the manufacturer and appliance.
- Section **2** contains general information, essential for knowing all about the appliance and its main parts, its permitted uses, its technical specifications, etc.
- Section 3 is dedicated to user safety.
- Section 4 addresses the user and contains instructions for correct use of the appliance.
- Section **5** is intended for qualified fitters and concerns correct installation of the appliance.
- Section **6** contains information about maintenance, describing operations the user needs to carry out and those which must be carried out by a fitter or authorized technician. It also contains a chapter dedicated to troubleshooting, identifying the cause of problems and possible solutions.
- Section 7, if present, contains tables and annexes.



1.1.1 Symbol used

During machine use, it is possible to face situations for which special considerations and adequate close examinations are needed.

The following "graphic safety symbols" are used in this manual. They aim to highlight risks or important information:



DANGER

Draws attention to actions which, if not correctly carried out, may cause serious injury or death or may be a health risk for people and the environment.



WARNING

Draws attention to operations, procedures or actions which, if not carefully carried out, may cause serious damage to the appliance or product.



IMPORTANT

Draws attention to technical information or practical recommendations that ensure efficient and economical use of the appliance. Failure to comply with this information may void the warranty.

1.1.2 Abbreviations used

Ref.	Description		
Ann.	Annex		
Chap.	Chapter		
Fig.	Figure		
Max.	Maximum		
Min.	Minimum		
Mod.	Model		
Page	Page		
Par.	Paragraph		
Ref.	Reference		
Tab.	Table		
U.m.	Unit of measurement		

Tab. 1 Abbreviations used

1-2 **Correct manual storage**

This manual must be handled with care and clean hands and it should never be placed on dirty surfaces. It should be stored in a cool, dry place.

No part of the manual should be removed, torn out or arbitrarily changed.



DANGER

This manual is an integral part of the appliance and must be kept until final disposal of the same.



1-3 Identification data

Check that the instruction manual corresponds to the appliance being referred to.

In the event of any request for information or technical assistance, it will be necessary to specify the model and type of appliance, as well as its serial number.

1.3.1 Appliance type and model

The appliance type and model are indicated on the identification plate.

1.3.2 Manufacturer

CASTA s.r.l.

Via F.Ili Lumière, 11 (Z.I. Villa Selva) - 47122 FORLI' (FC) - ITALY

Tel. +39 0543 782920 - Fax +39 0543 782925

http://www.casta.com E-mail: casta@casta.com

VAT no. 03497370407

1.3.3 Identification plate

The identification plate shown is applied directly to the appliance. It includes all appliance and manufacturer identification data and the CE mark of conformity.

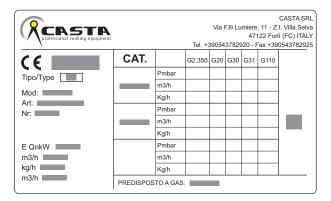


Fig. 1 Identification plate



Fig. 2 Plate position

1.3.4 Identification plates of the main components

The plates of all the commercial components not produced by the Manufacturer are applied directly to the relevant components, where their respective manufacturers originally placed them.

1.3.5 CE mark of conformity

The CE mark applied on the identification plate confirms that the appliance complies with the safety requirements specified in the following directives:

Directive 2006/95/EC (Low voltage)

Directive 2004/108/EC (Electromagnetic compatibility)

Regulation 2004/1935/EC (Materials intended to come into contact with food)



1-4 Requests for assistance

- As stated in the sales terms and conditions, the appliance is covered by a warranty. If during the validity period of the same any faults or breakages covered by the warranty should occur, the Manufacturer will repair or replace faulty parts after carrying out the necessary checks.
- Any modifications carried out by the user without express written authorization by the Manufacturer shall void the warranty and relieve the Manufacturer of any responsibility for damage caused by the faulty appliance. This also applies when non-original spare parts are used.
- For all of the above reasons, in the event of an emergency, we recommend contacting the Manufacturer's Technical Assistance Department directly.

CASTA s.r.l.



IMPORTANT

For any type of service request it is necessary to specify the data on the identification plate and the type of fault.



Document id: CA14 FRY-TOP E E7 Rev0 05-2014

2 TECHNICAL INFORMATION



2-1 General description of the appliance

2.1.1 Intended uses

The appliance has been designed and manufactured for the professional catering sector.

The appliance function is to cook the food in direct contact with the plate.

In order to use the appliance safely, it is essential to install it according to the laws, regulations and specifications applicable in the country where the appliance is to be installed.

2.1.2 Improper use

Improper use means any use of the appliance following criteria that do not comply with the instructions in this manual and that, as a result, may endanger safety.

The Manufacturer shall not be held responsible for any damage caused by improper use of the appliance.

- Do not use the appliance to fry food submerged in oil.
- Do not use the appliance to heat pots or pans.
- (For models with chrome plate) do not use the appliance to cook deep-frozen food; the sudden change in temperature could damage the plate surface.



DANGER

Do not use the appliance other than for the use intended by the Manufacturer. Improper use is forbidden.



2.1.3 Main appliance parts

The picture and descriptions show the appliance fitted with all possible accessories. Depending on the model chosen, your appliance may be different.

- A. Splashguard
- B. Chimney for fume discharge with cast iron grid
- C. Control panel
- D. Safety thermostat
- E. Adjustable feet
- F. Cooking plate
- G.Collecting tray
- H. Drain HOLE

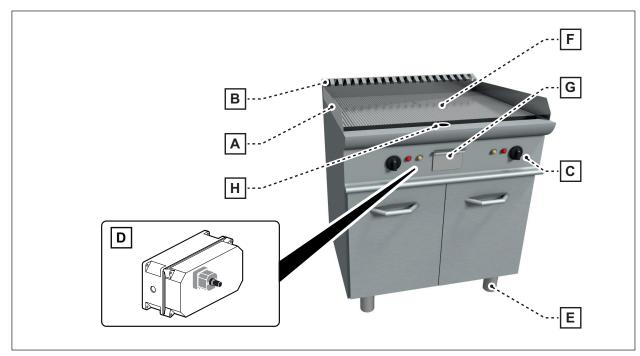


Fig. 3 Main appliance parts



2.1.4 Structural features

The main structure of the appliance is made in stainless steel 18/10 and stands on four height-adjustable feet.

The structural features of the main elements that make up the appliance are described below:

- Rounded top surface, built-in chimney for fume discharge and acid-resistant, polished, black porcelainenamel cast iron grid;
- Cooking plate made of bright and hard chrome (15 mm) or of mild polished steel (15 mm); available versions: smooth, grooved or 1/2 smooth and 1/2 grooved;
- Cool-grip knobs.



IMPORTANT

The appliance is equipped with a safety thermostat that automatically cuts power off if the heating element temperature is higher than the set limit value.



Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014

3 SAFETY INFORMATION



3-1 Safety

- Use the appliance only for the purposes intended by the Manufacturer.
- Improper use of the appliance may result in a risk to the health and safety of people, as well as economic damage.
- As the appliance is used to prepare food for human consumption, special attention should be paid to everything related to hygiene and to keeping the appliance and surrounding area clean at all times.
- The appliance must be used by personnel trained on the appliance characteristics and functioning. Please refer to this manual. In case of more than one operator, consider handing out a copy of this manual to each one of them.
- Any maintenance operations requiring technical know-how or specific skills must be carried out exclusively by qualified personnel, properly trained in the specific field.
- To maintain hygiene and protect food from contamination, clean elements that come into direct or indirect contact with food and the surrounding areas thoroughly. Carry out these operations using only detergent products for food use and do not use flammable materials or materials containing substances that are harmful to people's health.
- In the event of long periods of inactivity, besides disconnecting all the power supplies, clean all internal and external parts of the appliance and the surrounding area thoroughly.

3.1.1 Safe use of the appliance

Since this appliance has been designed exclusively for professional use, it must only be used by qualified personnel.

- During the appliance operation, the surfaces next to the cooking plate may become hot. Risk of scalding! Before carrying out any intervention on the appliance (for instance for cleaning operations), ensure that it has cooled down.
- Never leave the appliance unsupervised when it is on.
- Do not leave any flammable objects, such as paper, plastic, rags, polystyrene, etc., near the appliance when it is on as they may start a fire.
- Keep the work area clean: do not leave any objects lying around the room as they might make it unsafe for personnel to move around.
- Do not obstruct air intake or heat extraction openings.



WARNING

It is strictly forbidden to modify or carry out any type of intervention on the appliance, except those related to routine maintenance.

Any modification not explicitly approved by the Manufacturer will automatically void the warranty and the appliance conformity to the directives.

3.1.2 Safety instructions in the event of malfunctioning

In an emergency:

- Turn the electricity off.
- Contact the Manufacturer's Customer Care Service or a specialized technician.



DANGER

Turn off the appliance if any faults or malfunctioning occur.

3.1.3 Appliance disposal

The appliance has been manufactured using recyclable raw materials and does not contain any harmful or toxic substances.

All materials must be disposed of in compliance with the regulations applicable in the country of use of the appliance.


Always comply with environmental protection regulations.



This page intentionally left blank



Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014

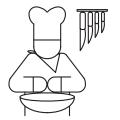

4 INFORMATION FOR CORRECT USE



4-1 First use

Clean the appliance thoroughly when using it for the first time.

Remove all packaging and clean the appliance using hot water and a sponge. Stainless steel parts must be cleaned with a non-abrasive detergent specifically designed for cleaning such surfaces. (see par. *Useful tips for stainless steel care* on page 26).

After cleaning the appliance, rinse thoroughly with clean water and dry with a cloth.

Do not use water jets to clean the appliance.



IMPORTANT

Before using models with chrome plate, it is necessary to pre-heat for about 30 minutes at a temperature of 150 °C.

4-2 Complete map of the controls

The pictures show the control panel configuration with all available accessories.

- A. Cooking start and stop knob
- B. "Reaching the set temperature" warning light (orange colour)
- C. "Heating element on" warning light (white colour)

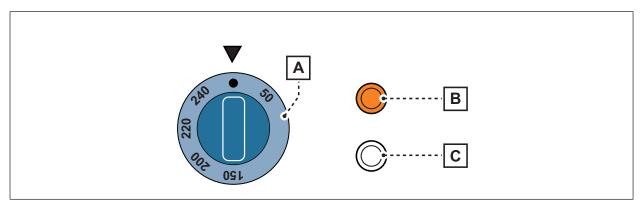


Fig. 4 Control map for models with chrome plate

4-3 Appliance start and turning off

4.3.1 Appliance start

- Set the cooking temperature by turning the knob (A) anti-clockwise.
- The "Heating element on" warning light (C) comes on (white colour).
- The "Reaching the set temperature" warning light **(B)** comes on (orange colour) to signal that the heating phase is in progress; once the set temperature has been reached, it comes off.

Pos.	Temperature	
•	0°C	
50	50°C	
150	150°C	
200	200°C	
220	220°C	
240	240°C	

Tab. 2 Cooking temperature

4.3.2 Appliance turning off

- Move knob (A) to the (Off) position.
- Warning lights (B) and (C) come off.

4-4 Safety thermostat

The appliance is equipped with a safety thermostat per each heating element unit; this device automatically cuts power off if the heating element temperature is higher than the set limit value.

4.4.1 Safety thermostat reset

In case of safety thermostat activation, proceed as indicated.

- disconnect the appliance from the power supply by means of the main switch;
- wait for 10 minutes to allow the appliance and the heating elements to cool down;
- press button (L);
- restore the appliance electric connection;
- Start the appliance again by working on the control knob; in case the safety thermostat is triggered again, contact the Customer Care Service.

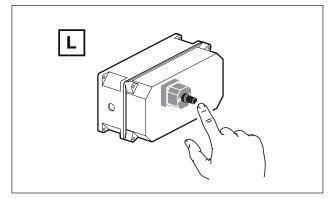


Fig. 5 Safety thermostat



4-5 Recommendations for use

- Before positioning the food to be cooked, wait for the plate to reach the correct temperature.
- Avoid scratching or hitting the cooking plate surface with any object.
- Cover the appliance when it is not used.

4-6 What to do in the event of long periods of inactivity

If the appliance is not to be used for a certain period of time, it is necessary to:

- disconnect the electricity supply;
- clean and dry the alliance;
- after cleaning and drying the appliance, protect it with a film of a suitable product (for example, Vaseline oil spray or a similar product);



Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014

5 MAINTENANCE INFORMATION



5-1 Maintenance recommendations

Keeping the appliance working to maximum efficiency, also thanks to scheduled maintenance recommended by the Manufacturer, will guarantee optimal performance, a longer lifespan and maintenance of all the safety requirements.

After **each use** or whenever necessary, clean the external parts of the appliance and surrounding area. At least **twice a year**, have an authorized technician check the appliance; **it would be advisable to enter a maintenance contract**.



DANGER

Before cleaning, turn the appliance off and disconnect the electricity supply (disconnect the power supply cable); wait for the cooking plate to cool down.

Cleaning must be carried out once the appliance has cooled down.

5-2 Ordinary cleaning

Thorough daily cleaning of the appliance after use ensures perfect operation and a long lifespan. Clean using a damp cloth, water and soap or detergents and avoid abrasive or acidic products; these must not be used even to clean the floor near the appliance as the vapours may deposit on and deteriorate the steel. Rinse thoroughly with clean water and dry. Never use direct water jets so as not to cause infiltrations that may be harmful to the appliance.

Description	Products	
For washing and cleaning	Room temperature drinking water	
For cleaning and drying	A non-abrasive cloth that does not leave any residues	
ecommended detergent products	Detergents containing:	
	- caustic potash at 5% (max)	
	- caustic soda at 5%	
	Rinse-aid products containing:	
oducts for eliminating unpleasant smells	- citric acid	
	- acetic acid	

Tab. 3 Table of cleaning products



5.2.1 Recommendations for cleaning the cooking plate

In order to clean the cooking plate correctly, it is necessary to use a scraper suitable for the plate type (smooth or grooved).

Proceed as indicated:

- Smear the cooking plate with a suitable degreasing product and leave it on for a few minutes.
- Close the drain hole.
- Pour water at 60 °C on the plate and wait for a few minutes.
- Remove the collecting tray and place a bucket under the drain hole.
- Remove the discharging plug and let all water flow from the plate.
- Carefully clean the plate with a sponge.
- Rinse thoroughly and dry.



IMPORTANT

Rinse thoroughly and ensure that no degreasing product residues remain on the plate surface.

5.2.2 Main causes of deterioration or corrosion of stainless steel

This list shows the main causes of deterioration or corrosion of stainless steel.

- Use of abrasive or acid detergents, especially with a chlorinated base, such as hydrochloric acid or sodium hypochlorite (bleach); therefore, before purchasing a detergent product, ensure it does not cause steel corrosion;
- Stagnation of ferrous deposits (such as those produced by the rust present in the water that runs through the pipes, especially after a certain period of inactivity); such stagnation must thus be avoided. Also avoid using iron wool to remove food residues that are hard to eliminate; instead, use scourers or spatulas made of stainless steel or softer materials but, in any case, non-ferrous materials;
- Stagnation of acidic substances, such as vinegar, lemon juice, sauces, salt, etc. Do not allow such substances to stay in contact with the steel parts of the appliance for long periods. The evaporation of saline solutions on the surfaces is particularly harmful for them.

See also par. Useful tips for stainless steel care on page 26.





5-3 Useful tips for stainless steel care

Stainless steel is defined as such because it owes its resistance to corrosion to a thin oxide protective film which forms at a molecular level on its surface; it is created by the oxygen absorbed by exposure to the air of the metal itself. It is clear therefore, that anything that prevents the formation of this film and its permanence on the surface, such as foreign materials on it, food or salt residues, etc. reduce the resistance of stainless steel to corrosion.

Its resistance and duration, however, is also directly related to good maintenance during use and in choosing suitable materials and products for such maintenance.



IMPORTANT

Before using any detergent product for cleaning stainless steel, as well as for the floor underneath or near the appliances, ask your usual detergent supplier about the most suitable product to ensure this product cannot cause corrosion.

Daily cleaning: clean the surfaces thoroughly and frequently using a damp cloth. You can also use water and soap or common detergents that do not contain abrasive or coloured substances. Wipe only in the direction of the satin finish. Rinse with plenty of clean water and dry thoroughly.

Food stains or hardened leftovers: Wash any food stains using hot water before they harden. If they have already hardened, use water and soap or non-abrasive detergents, using a wooden spatula or soft stainless steel scourer. Rinse with plenty of water and dry well.

Limescale deposits: Limescale on pots, containers, etc. must be removed using descaling agents.

Scratches on the surfaces: If scratches or lines are detected on the surfaces, smooth them using very fine stainless steel wool or synthetic fibre abrasive felt pads, wiping in the direction of the satin finish. Rinse well and dry.

Elimination of possible fading of the steel caused by food stains or burns or heat stains: Use smooth stainless steel wool or synthetic fibre abrasive felt pads, wiping in the direction of the satin finish. Rinse well and dry. Take care not to scratch the surface.

Rust: If rust stains are detected, contact manufacturers of industrial detergents for a product capable of removing the stains. For this purpose, you can also use industrial products for removing limescale. After use and after rinsing with clean water, it may be necessary to use an alkaline detergent to neutralize the acid compounds still on the surface.



IMPORTANT

After cleaning the stainless steel, especially the external surfaces of the appliance, and once they are completely dry, protect them with products commonly found on the market.

Besides eliminating marks or rings, they also restore the shine to the steel and prevent the infiltration of humidity and dirt, which cause corrosion.



5.3.1 Products that must not be used on stainless steel

- Never use chlorinated products, for example bleach, hydrochloric acid or any other solutions deriving from the same. These products guickly attack stainless steel, causing irreversible corrosion.
- To clean the floors underneath and near the appliances, never use the products mentioned above, since vapours or drops that may fall on the steel produce similar corrosive effects to those described above.
- Never use iron scouring pads or leave them on the surfaces, since small deposits may remain on it and lead to the formation of rust; use a soft stainless steel wool or synthetic fibre abrasive felt pads, always wiping in the direction of the satin finish and taking care not to scratch the surfaces, then rinse and dry.

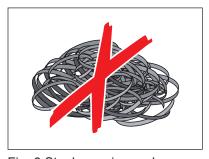






Fig. 6 Steel scouring pad

Fig. 7 Abrasive sponge

Fig. 8 Acidic substances

5.3.2 Some useful tips

- The pipes that supply water for use in pots, sinks, kitchens, washing machines, etc. inevitably surrender some rust, especially when taps are turned on after a period of inactivity or in case of new systems. Take care to prevent these oxides or ferrous deposits from coming into contact with the stainless steel for a long period of time, since they produce corrosion. It is always advisable to use galvanized pipes and to let the water run until it is perfectly clean.
- Avoid letting saline solutions evaporate, dry or stay in contact with stainless steel surfaces. For pots, never use coarse kitchen salt, which stays on the bottom and due to its weight cannot circulate and dissolve completely; this undissolved salt can cause corrosion. Therefore, it is advisable to crush it and add it to the pots when the water is boiling; if this is not possible and the salt is coarse, dissolve it in a separate container first. Avoid putting salt in pots of cold water or without water.
- When pots, washing machine compartments, bain-marie recipients, sinks, etc. are not used, they should preferably remain uncovered in order to keep the passivation film protecting the stainless steel stable and prevent it from coming into contact with possible aggressive agents.



5-4 Troubleshooting

Prior to start-up, the appliance has been tested by **qualified personnel**. The information contained in the following table is intended to help find and fix possible failures and faults that may occur during use. Some of these problems can be solved by the user, whilst all others **require specific technical know-how and skills and must therefore be solved by qualified and expert personnel**.

Problem	Likely cause	What should the user do	What should authorized personnel do
The heating elements do not heat	Fuses have tripped	Check that the fuses of the electrical system have not tripped. If the fuses trip repeatedly, contact an electrician.	-
	Adjustment thermostat is faulty	Contact a qualified technician.	Reset the thermostat.
A temperature is set but the appliance cannot be turned on	Insufficient voltage	Contact a qualified technician.	Check the electrical system and if it complies with appliance requirements.
	One or more faulty heating elements	Contact a qualified technician.	Replace the heating elements.
The appliance does not	Missing power supply	Ensure that the appliance is electrically powered	-
come on	The temperature has not been adjusted using the knob	Turn the knob and select the cooking temperature.	-
It is not possible to adjust the temperature	Operating thermostat damaged	Contact a qualified technician.	Replace the operating thermostat.

Tab. 4 Problems associated with the electrical system

ELECTRIC GRIDDLE PLATE



Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014



6 INSTRUCTIONS FOR QUALIFIED FITTERS



6-1 General information

The system and installation of the appliance must comply with existing UNI-CIG 8723 regulations and Italian Ministerial Decree dated 12 April 1996.

Appliance installation and maintenance **must be carried out by qualified and authorized personnel**, who must comply with the safety regulations applicable in the country where the appliance is to be installed.

6-2 Storage

If the appliance is stored in a warehouse at temperatures below 0°C, bring it to a temperature of at least +10°C before use.

6-3 Packaging

The appliance is usually packaged and shipped with all parts already assembled; therefore, when delivered, assembly is not necessary. The stainless steel parts and all framework panels are protected by an adhesive, scratch-resistant film.

The appliance is packaged inside a special wooden frame and placed on a pallet.

The packed appliance must be handled with care and kept in the correct position, according to the symbols present on the packaging.

During unpacking, ensure the appliance is in order and has all its components. When removing the scratch-resistant film, take care not to leave pieces of adhesive film on the panels.

It is advisable not to remove the packaging until the appliance is to be used so as to guarantee preservation of the same.

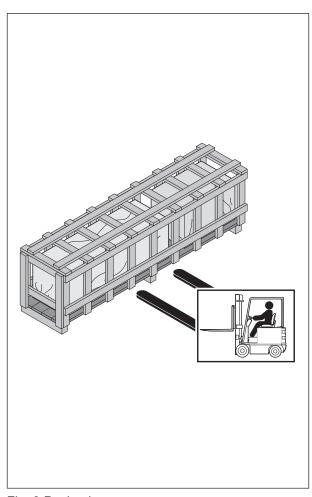


Fig. 9 Packaging



WARNING

Do not use cutters or any other sharp tools when unpacking. They may scratch the appliance surfaces irreparably.



WARNING

Packaging materials must be disposed of in compliance with the regulations applicable in the country where the appliance is to be installed. The various types of material must be separated and taken to special collection centres.

Always comply with environmental protection regulations.



6-4 Technical specifications

6.4.1 Composition and power of the appliance

Model	Description	Dimensions (mm)	Supply voltage	Current strength (A)	Power (kW)
E7/FTE1BBL	Electric griddle plate	350x700x270	3NAc 400V	13,5	5,4
E7/KTE1BBL	Electric griddle plate	350x700x270	3NAc 400V	13,5	5,4
E7/FTE1BBR	Electric griddle plate	350x700x270	3NAc 400V	13,5	5,4
E7/KTE1BBR	Electric griddle plate	350x700x270	3NAc 400V	13,5	5,4
E7/FTE2BBL	Electric griddle plate	700x700x270	3NAc 400V	27	10,8
E7/KTE2BBL	Electric griddle plate	700x700x270	3NAc 400V	27	10,8
E7/FTE2BBR	Electric griddle plate	700x700x270	3NAc 400V	27	10,8
E7/KTE2BBR	Electric griddle plate	700x700x270	3NAc 400V	27	10,8
E7/FTE2BBM	Electric griddle plate	700x700x270	3NAc 400V	27	10,8
E7/KTE2BBM	Electric griddle plate	700x700x270	3NAc 400V	27	10,8
E7/FTE1BAL	Electric griddle plate	350x700x850	3NAc 400V	13,5	5,4
E7/KTE1BAL	Electric griddle plate	350x700x850	3NAc 400V	13,5	5,4
E7/FTE1BAR	Electric griddle plate	350x700x850	3NAc 400V	13,5	5,4
E7/KTE1BAR	Electric griddle plate	350x700x850	3NAc 400V	13,5	5,4
E7/FTE2BAL	Electric griddle plate	700x700x850	3NAc 400V	27	10,8
E7/KTE2BAL	Electric griddle plate	700x700x850	3NAc 400V	27	10,8
E7/FTE2BAR	Electric griddle plate	700x700x850	3NAc 400V	27	10,8
E7/KTE2BAR	Electric griddle plate	700x700x850	3NAc 400V	27	10,8
E7/FTE2BAM	Electric griddle plate	700x700x850	3NAc 400V	27	10,8
E7/KTE2BAM	Electric griddle plate	700x700x850	3NAc 400V	27	10,8

Tab. 5 Technical specifications



6.4.2 Dimensions

Griddle plate bench model

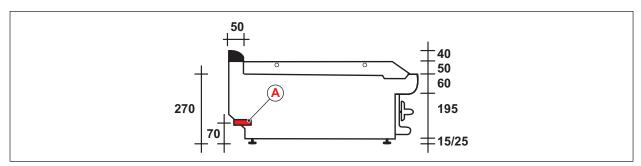


Fig. 10 Dimensions of griddle plate bench model

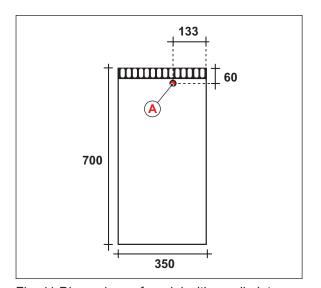


Fig. 11 Dimensions of model with small plate

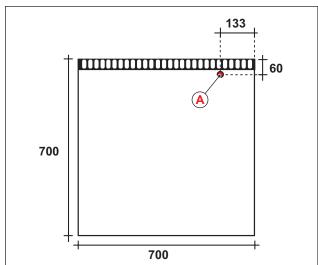


Fig. 12 Dimensions of model with large plate

A. 220V/1F electrical connection



Griddle plate with open cabinet

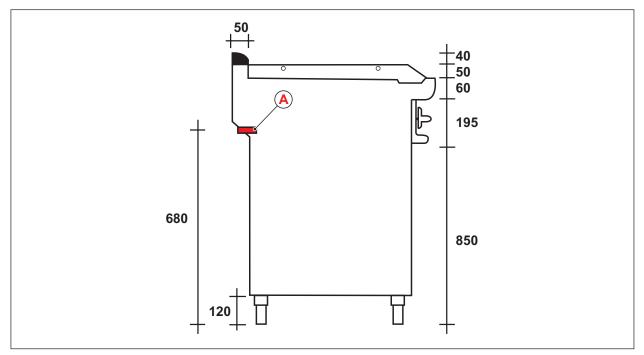
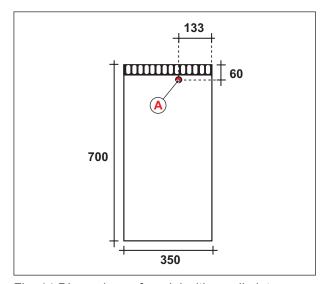



Fig. 13 Dimensions of griddle plate with open cabinet





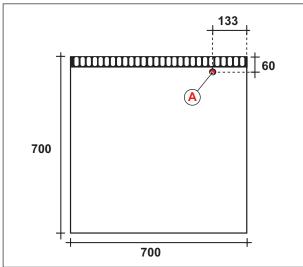


Fig. 15 Dimensions of model with large plate

A. 220V/1F electrical connection



Griddle plate with closed cabinet

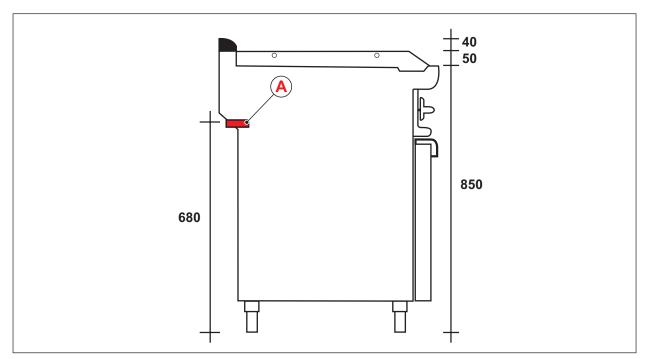


Fig. 16 Dimensions of griddle plate with closed cabinet

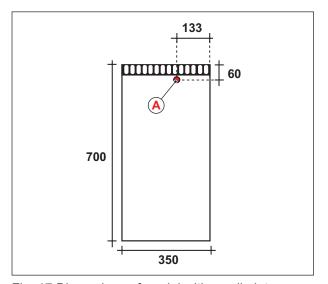


Fig. 17 Dimensions of model with small plate

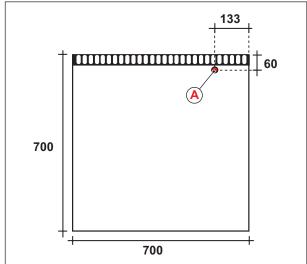


Fig. 18 Dimensions of model with large plate

A. 220V/1F electrical connection

6-5 Positioning and installation

The installation area must be equipped with all necessary power supply, ventilation, air intake and extraction connections, it must be properly illuminated and must comply with all health and safety requirements, in compliance with applicable laws, in order to avoid food contamination.

Ensure that the floor or support surface is flat and solid so that the base of the appliance is level and stable.



WARNING

The Manufacturer shall not be held responsible for any damage to people or objects caused by installation errors or by an inappropriate use of the appliance.

Any fault caused by wrong installation shall automatically void the warranty.

The system and installation of the appliance must comply with existing UNI-CIG 8723 regulations and Italian Ministerial Decree dated 12 April 1996.

Appliance installation and maintenance **must be carried out by qualified and authorized personnel**, who must comply with the safety regulations applicable in the country where the appliance is to be installed.



6.5.1 Positioning of the appliance



DANGER

The appliance must be installed at least 200 mm from flammable walls. This distance may be lower when the walls are fireproof or protected by heat insulating material. The appliance is not suitable for built-in systems.



WARNING

Ensure that, once installed, the appliance can easily be reached by technical service personnel in the event of any fault occurring.

- Remove the appliance from its packaging and position it where it is to be used;
- Adjust the feet so that the appliance is level;
- Remove the transparent adhesive protective film from the surfaces, detaching it slowly to avoid leaving glue residues on the appliance.
- Connect the appliance to the premises electric network (chap. Mains Electricity Connection on page 39).

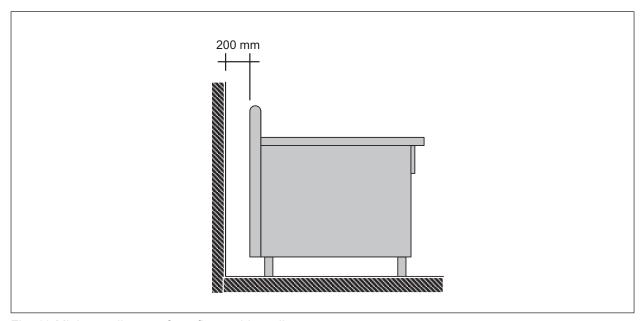


Fig. 19 Minimum distance from flammable walls

6.5.2 Ventilation of the installation premises and extraction of cooking heat and steam

The premises where the appliance is installed must have air intakes to ensure the correct functioning of the appliance and proper air exchange.

Air intakes must be of a suitable size, must be protected by grilles and must be placed in such a way that they cannot be obstructed.




Fig. 20 Ventilation of the installation premises

Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014



To guarantee the complete extraction of heat and steam produced during water warm up, the appliance must be installed in well-ventilated premises (possibly under an extraction hood) in compliance with applicable regulations.

In case of installation under a hood (see *Fig. 22 Extraction through hood*), the final part of the appliance extraction duct must be about **1.8 m** from the appliance support surface; the outlet of the extraction duct must be placed within the basic perimeter of the hood.

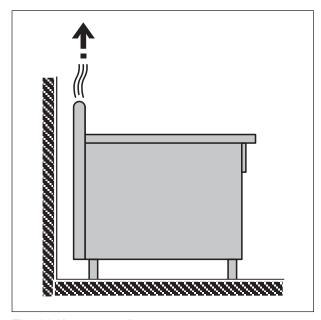



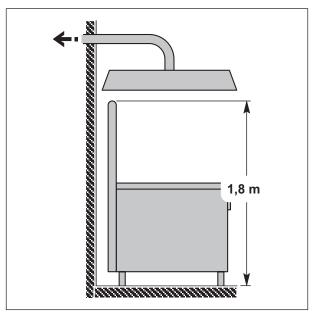


Fig. 22 Extraction through hood



6-6 Mains Electricity Connection



WARNING

All electrical operations necessary to install the appliance and the supply cable must be carried out by qualified electricians or technicians in compliance with applicable regulations.

- The appliance is designed to operate at the voltage indicated on the identification plate; before connection of the appliance to power mains, check that the voltage of the mains supply in the premises complies with the data indicated on the identification plate.
- The supply cable can only be installed by the Manufacturer or by a qualified operator.
- The supply cable must be made of rubber, with a quality level equal to at least H07RN-F and with conductors with a cross-section suitable for the maximum load to be carried.
- The supply cable must not be exposed to direct sources of heat; once installation and connection are complete, the supply cable should be placed in such a way that no part of it reaches a temperature that is 50°C higher than room temperature.
- The electrical safety of this appliance is guaranteed only when it is correctly connected to an efficient earthing system; it is necessary to check this essential safety requirement and if in doubt, ask qualified personnel to carry out a thorough check of the system.



IMPORTANT

Connect the appliance to an efficient earthing system!

The Manufacturer cannot be held responsible for any damage caused if the system is not earthed.

- An efficient omnipolar circuit breaker with a contact opening of at least 3 mm must be installed in the electrical supply system, fitted upstream of the appliance; automatic circuit-breaker switches can be used for this purpose.
- The omnipolar circuit breaker should be close to the appliance and easily accessible once installation is complete.
- The yellow-green earth cable must not be interrupted by the switch.



IMPORTANT

It is advisable to insert an integrated circuit-breaker switch with fuses.

6.6.1 Connection of the power supply cable

Connect the power supply cable (supplied) in compliance with applicable regulations; the power supply cable must be blocked using a cable clamp mounted on the appliance in order to prevent the risk of breakage.



WARNING

The earth cable must be longer (about 2 cm more) than the other conductor cables. In the event of strong traction of the cable or breakage of the cable clamp, the earth cable must be disconnected after the other conductors.



6-7 Inspection and start-up



IMPORTANT

Before start-up, the system should be tested in order to assess the operating conditions of each component and detect any possible failures. At this stage it is important to check that all safety and hygiene conditions are strictly complied with.

6.7.1 Checking the electrical system

Carry out the following checks:

Turn the appliance on according to the instructions for use, check the correct functioning of the control panel warning lights and control devices, testing various temperature values.

The appliance is equipped with a safety thermostat that automatically cuts power off if the heating element temperature is higher than the set limit value.

6.7.2 Heat extraction check

Check that nothing obstructs air intake or heat extraction openings.

6.7.3 Checking ventilation of the installation premises

Carry out the following checks:

- check that the premises where the appliance is installed is well-ventilated.
- air intake openings must be placed in the lower part of the external walls, preferably opposite the wall where the extraction of steam produced during cooking is situated.
- air intake openings must be built in such a way that they cannot be obstructed.

6.7.4 Instructions for users

After testing, if necessary, train users so that they acquire all the necessary skills to start-up the appliance in safe conditions, as provided for by applicable regulations.



IMPORTANT

While explaining, always refer to this Use and Maintenance Manual.



Maintenance to be carried out by a fitter or qualified technician

The following maintenance operations must be carried out **at least once a year**:
- Check the efficiency of the cooking heat and steam extraction system (if any);

- Check adjustment device efficiency.
- Check safety thermostat efficiency;



This page intentionally left blank



Document id: CA14 FRY-TOP E E7 Rev0 05-2014

7 TABLES AND ANNEXES



7-1 Wiring diagram

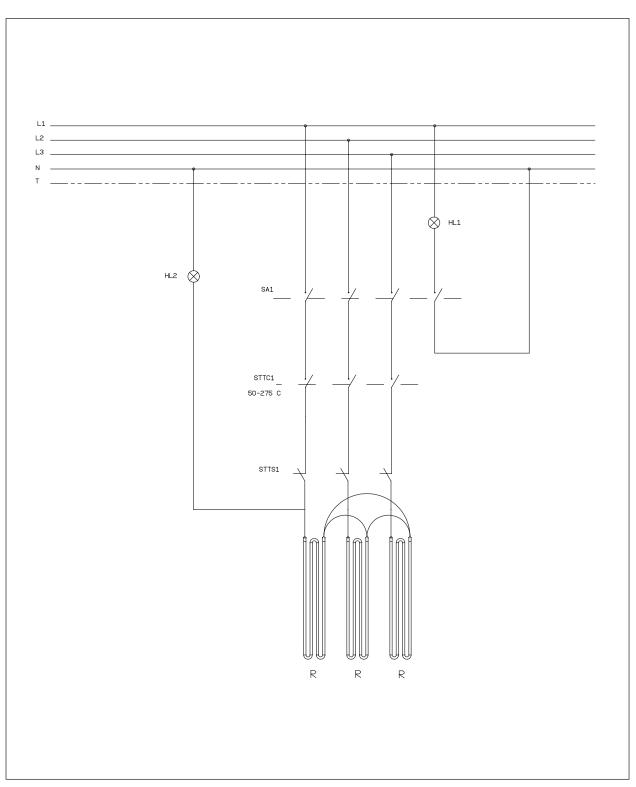


Fig. 23 Wiring diagram

Document id: CA14_FRY-TOP_E_E7_Rev0_05-2014



This page intentionally left blank

CASTA s.r.l.

Via F.IIi Lumière, 11 (Z.I. Villa Selva) - 47122 FORLI' (FC) - ITALY Tel. +39 0543 782920 - Fax +39 0543 782925

http://www.casta.com E-mail: casta@casta.com

VAT no. 03497370407